




DIAMOND SYSTEMS CORPORATION

CME-Atom

COM Express 1.0 Computer-On-Module Based on Intel® Atom Z530P/Z510PT CPU

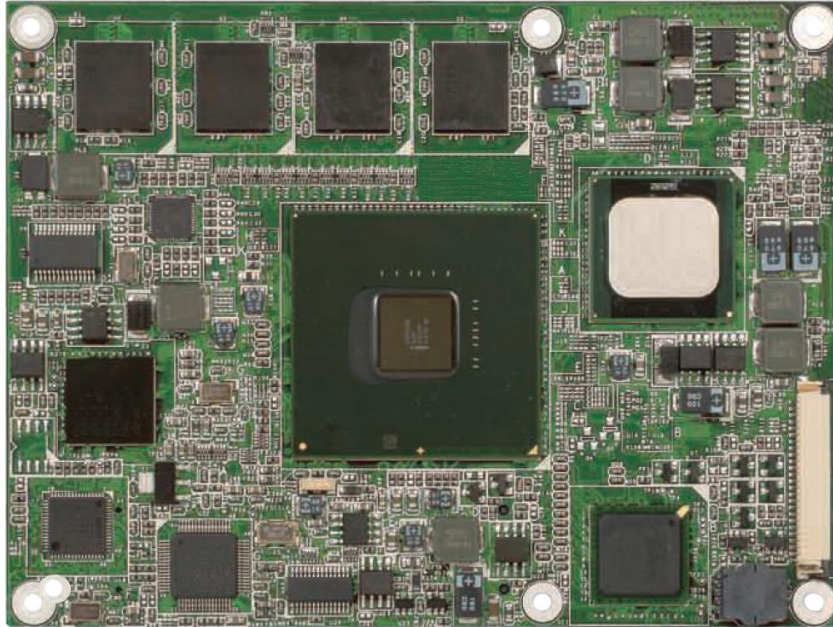

| Revision | Date | Comment |
|----------|----------|----------------------------------------------|
| 1.0 | 02/08/10 | Release candidate 1 |
| 1.1 | 03/02/10 | Corrections to product model names and specs |
| | | |

**FOR TECHNICAL SUPPORT
PLEASE CONTACT:**

support@diamondsystems.com

© Copyright 2010
Diamond Systems Corporation
1255 Terra Bella Ave.
Mountain View, CA 94043 USA
Tel 1-650-810-2500
Fax 1-650-810-2525
www.diamondsystems.com

CONTENTS

| | |
|------------------------------------------------------------|----|
| IMPORTANT SAFE-HANDLING INFORMATION | 3 |
| 1. INTRODUCTION | 4 |
| 1.1 Features | 4 |
| 2. FUNCTIONAL OVERVIEW | 6 |
| 2.1 Block Diagram | 6 |
| 2.2 Board Dimensions, Mounting Holes, and Connectors | 7 |
| 2.3 Bus and Interface Connector Summary | 9 |
| 2.4 COM Express Bus Connectors | 9 |
| 3. GETTING STARTED | 10 |
| 3.1 COM Express Development Kits | 11 |
| 3.2 Preparing the Hardware | 11 |
| 3.3 Booting the System | 12 |
| 3.4 BIOS Setup Utility | 12 |
| 3.4.1 Main Setup Menu | 12 |
| 3.4.2 Advanced Setup Menu | 12 |
| 3.4.3 PCI/PnP Settings Menu | 13 |
| 3.4.4 Boot Settings Menu | 13 |
| 3.4.5 Security Settings Menu | 13 |
| 3.4.6 Chipset Settings Menu | 13 |
| 3.4.7 Exit | 14 |
| 3.5 Operating System Drivers | 14 |
| 3.6 BIOS Beep Sounds List | 14 |
| 4. INTERFACE CONNECTOR DETAILS | 15 |
| 4.1 COM Express AB Connector | 16 |
| 4.1.1 USB signals | 18 |
| 4.1.2 Gigabit Ethernet (LAN) | 18 |
| 4.1.3 AC97 Audio/High Definition Audio | 18 |
| 4.1.4 PCI Express | 19 |
| 4.1.5 SATA | 19 |
| 4.1.6 General Purpose Inputs and Outputs (GPIO) | 19 |
| 4.1.7 Power and System Management | 20 |
| 4.1.8 LVDS Flat Panel | 21 |
| 4.1.9 LPC Interface | 21 |
| 4.1.10 Analog VGA (CRT) | 22 |
| 4.1.11 TV Out | 22 |
| 4.1.12 Miscellaneous Signals | 23 |
| 4.2 COM Express CD Connector | 24 |
| 4.2.1 IDE | 26 |
| 4.2.2 PCI Bus Interface | 27 |
| 5. APPENDIX: SYSTEM RESOURCES REFERENCE | 28 |
| 5.1 BIOS Memory Mapping | 28 |
| 5.2 I/O Port Address Map | 28 |
| 5.3 Interrupt Request (IRQ) Lines | 29 |
| 5.4 BIOS Beep Codes | 30 |
| 5.4.1 Boot Block Beep Codes | 30 |
| 5.4.2 Post BIOS Beep Codes | 30 |
| 5.4.3 Troubleshooting Post BIOS Beep Codes | 31 |
| 5.4.4 Bootblock Initialization Code Checkpoints | 32 |
| 5.4.5 Bootclock Recovery Code Checkpoints | 33 |
| 5.4.6 POST Code Checkpoints | 34 |
| 5.4.7 DIM Code Checkpoints | 37 |
| 5.4.8 ACPI Runtime Checkpoints | 38 |

IMPORTANT SAFE-HANDLING INFORMATION



WARNING: ESD-Sensitive Electronic Equipment!

Observe ESD-safe handling procedures when working with this product.

Always use this product in a properly grounded work area and wear appropriate ESD-preventive clothing and/or accessories.

Always store this product in ESD-protective packaging when not in use.

Safe Handling Precautions

The CME-Atom contains numerous I/O connectors that connect to sensitive electronic components. This creates many opportunities for accidental damage during handling, installation and connection to other equipment. The list here describes common causes of failure found on boards returned to Diamond Systems for repair. This information is provided as a source of advice to help you prevent damaging your Diamond (or any vendor's) embedded computer boards.

ESD damage – This type of damage is almost impossible to detect, because there is no visual sign of failure or damage. The symptom is that the board simply stops working, because some component becomes defective. Usually the failure can be identified and the chip can be replaced. To prevent ESD damage, always follow proper ESD-prevention practices when handling computer boards.

Damage during handling or storage – On some boards we have noticed physical damage from mishandling. A common observation is that a screwdriver slipped while installing the board, causing a gouge in the PCB surface and cutting signal traces or damaging components.

Another common observation is damaged board corners, indicating the board was dropped. This may or may not cause damage to the circuitry, depending on what is near the corner. Most of our boards are designed with at least 25 mils clearance between the board edge and any component pad, and ground / power planes are at least 20 mils from the edge to avoid possible shorting from this type of damage. However these design rules are not sufficient to prevent damage in all situations.

A third cause of failure is when a metal screwdriver tip slips, or a screw drops onto the board while it is powered on, causing a short between a power pin and a signal pin on a component. This can cause overvoltage / power supply problems described below. To avoid this type of failure, only perform assembly operations when the system is powered off.

Sometimes boards are stored in racks with slots that grip the edge of the board. This is a common practice for board manufacturers. However our boards are generally very dense, and if the board has components very close to the board edge, they can be damaged or even knocked off the board when the board tilts back in the rack. Diamond recommends that all our boards be stored only in individual ESD-safe packaging. If multiple boards are stored together, they should be contained in bins with dividers between boards. Do not pile boards on top of each other or cram too many boards into a small location. This can cause damage to connector pins or fragile components.

Power supply wired backwards – Our power supplies and boards are not designed to withstand a reverse power supply connection. This will destroy each IC that is connected to the power supply. In this case the board will most likely will be unrepairable and must be replaced. A chip destroyed by reverse power or by excessive power will often have a visible hole on the top or show some deformation on the top surface due to vaporization inside the package. **Check twice before applying power!**

1. INTRODUCTION

The CME-Atom is a highly integrated computer-on-module (COM) based on the low power, high performance Intel® Atom processor clocked at up to 1.6GHz. The module is equipped with up to 2GB of soldered-on DDR2 SDRAM and provides interfaces for high-resolution CRTs and LVDS-interfaced LCDs, gigabit Ethernet, SATA drives, USB peripherals, and audio. Additionally, the CME-Atom offers a high degree of system expansion flexibility via the presence of both PCI Express and PCI buses on its COM Express 1.0 compliant baseboard interface connectors.

1.1 Features

- Processor:
 - CME-Z530: 1.6GHz Intel Atom Z530P CPU; 400MHz FSB; 1MB L2 cache
 - CME-Z510: 1.1GHz Intel Atom Z510PT CPU; 400MHz FSB; 1MB L2 cache
- Chipset: Intel Poulsbo US15WPT
- Soldered-on RAM:
 - CME-Z530: 2GB DDR2 533MHz SDRAM
 - CME-Z510: 1GB DDR2 533MHz SDRAM
- Graphics:
 - Based on integrated Intel Graphics Media Accelerator 500
 - Provides two display interfaces:
 - VGA RGB at up to 2048 x 1536 resolution
 - Single-channel 24-bit LVDS
- Audio:
 - AC'97 link
 - Mic in, line in/out signals
- USB interfaces: 8 USB 2.0 ports
- Networking: 10/100/1000 Mbps Ethernet (Intel 82574IT controller)
- Mass storage interface:
 - SATA port supports one device (Primary Master); 150MB/s max. data rate
 - USB mass storage devices supported in BIOS and OSes
- Keyboard/mouse: USB keyboard/mouse devices supported in BIOS and OSes
- Other:
 - PC speaker interface
 - Watchdog timer with 1-255 levels, reset
 - 8-bit programmable digital I/O port
 - I2C, SMBus serial buses
- Three system expansion buses:
 - PCI Express: 6 PCIe x1 lanes
 - PCI Bus: 4 32-bit PCI bus masters
 - LPC bus

- Power:
 - +12VDC main power; +5VDC standby power
 - Power requirement: 9W idle, 13W loaded (preliminary)
 - Real-time clock backup: 2.0 to 3.6 VDC @ (tbd)
- Operating environment:
 - Operating temperature range:
 - CME-Z530: -40°C to +85°C
 - CME-Z510: -20°C to +71°C
 - 0 to 90% operating humidity (non-condensing)
- Dimensions:
 - COM Express compliant form-factor
 - 4.9 x 3.7 inches (125 x 95 mm)
- Weight: 2.8 oz (79 g)
- Software:
 - BIOS: AMI PnP flash BIOS
 - Operating systems supported: Windows XP/Vista; Linux 2.6

Note: The COM Express specification is available from the PICMG organization (<http://www.picmg.org>). The COM Express Tutorial and COM Express Design Guide are available for download from the PICMG organization COM Express website located at: <http://www.picmg.org/v2internal/COMExpress.htm>

2. FUNCTIONAL OVERVIEW

2.1 Block Diagram

Figure 1 shows the CME-Atom functional blocks, bus, and peripheral interface signals.

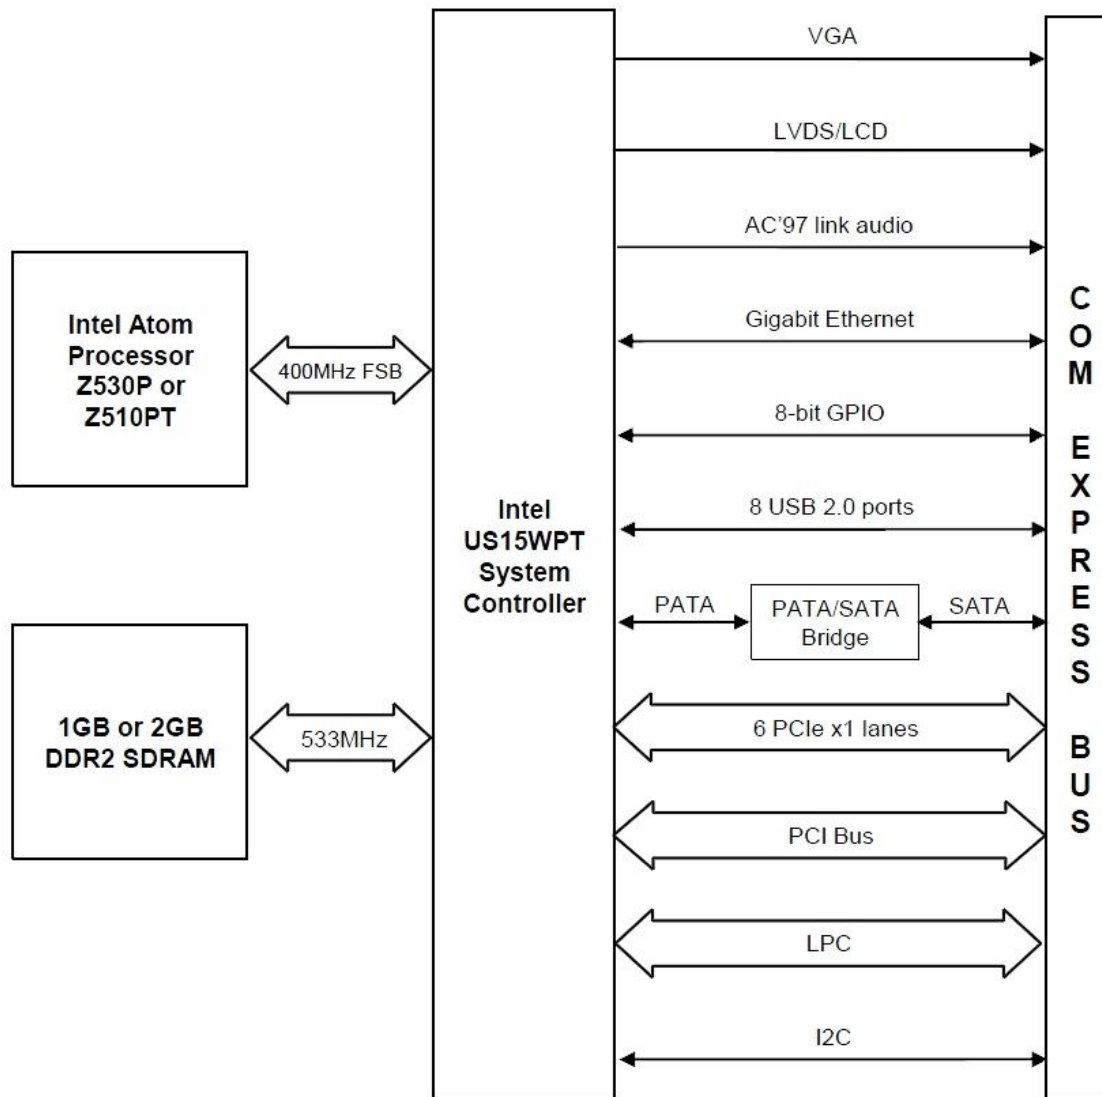


Figure 1: Functional Block Diagram

2.2 Board Dimensions, Mounting Holes, and Connectors

The two diagrams below show the mechanical dimensions of the CME-Atom's board outline and five mounting holes, as well as the position of all connectors on both the top and bottom sides of the board.

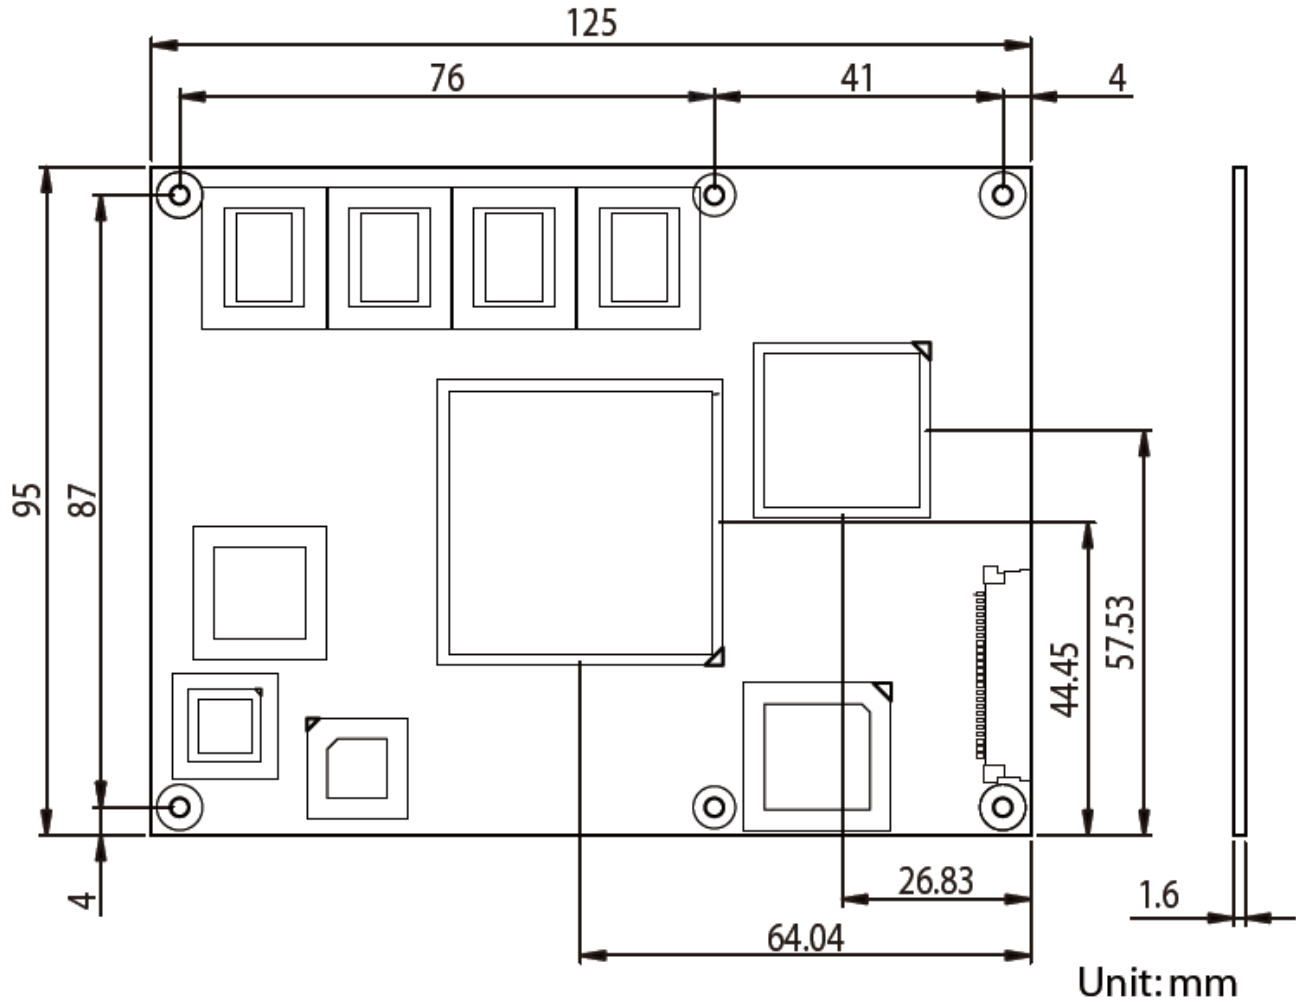


Figure 2: Board Layout – Top

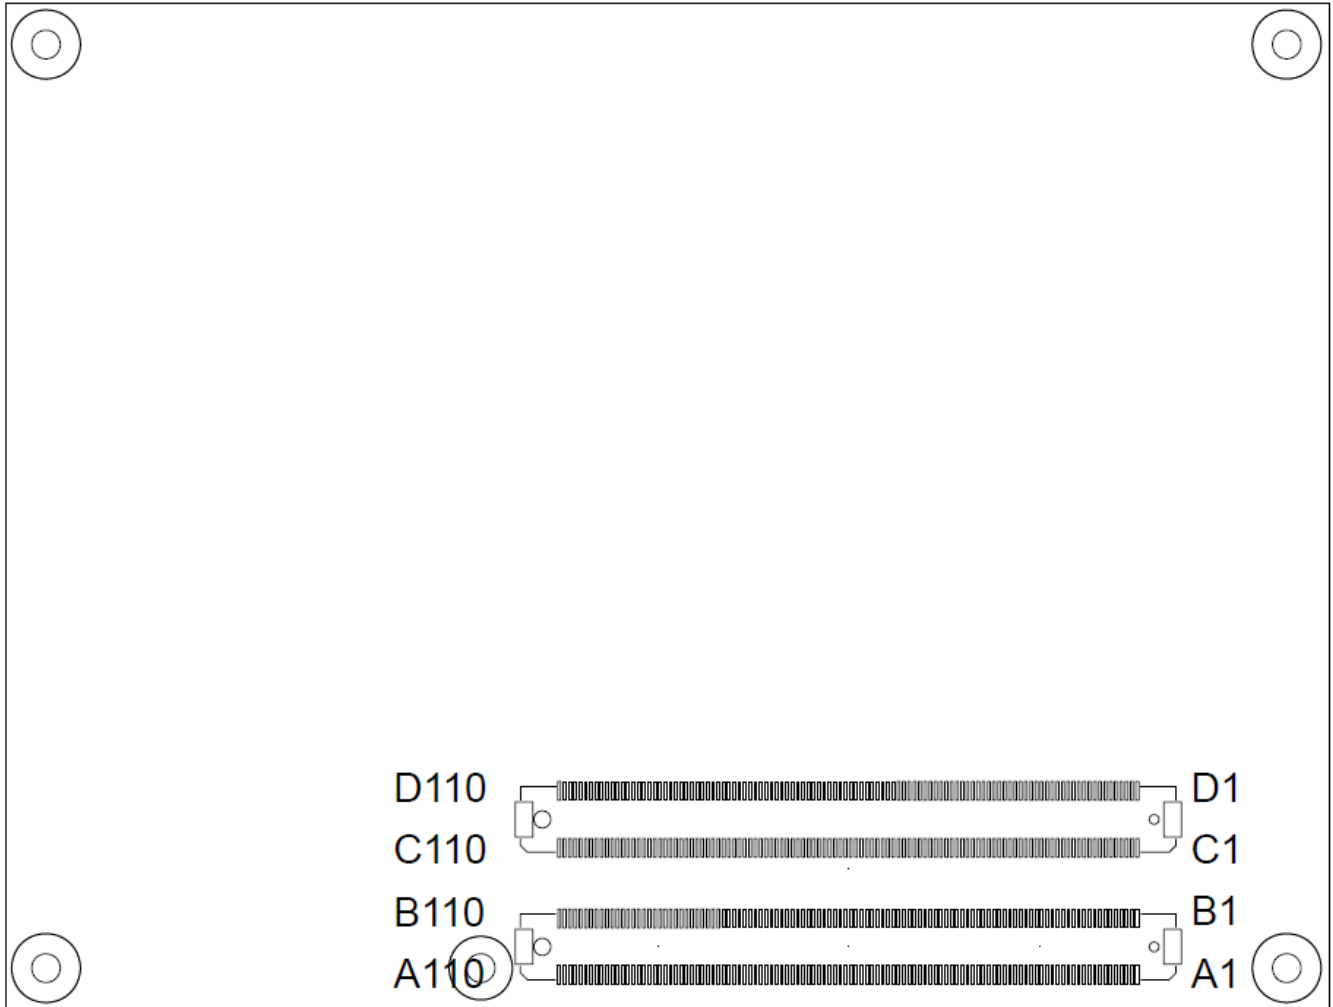


Figure 3: Board Layout – Bottom

2.3 Bus and Interface Connector Summary

The CME-Atom has two 2x110-pin interface connectors, as listed in the tables below which are defined in accordance with the PICMG COM Express Specification. Signal functions relating to all of the module's interface connectors are discussed in greater detail in Section 4 of this document.

2.4 COM Express Bus Connectors

| <i>Connector</i> | <i>Location</i> | <i>Pins</i> | <i>Function</i> |
|------------------|-----------------|-------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| COMX AB | Bottom | 2x110 | USB, GigE, PCI Express, AC97 (audio), SATA, LVDS, LPC, VGA (CRT), LAN, TV Out, power and ground interfaces, and system and power management. |
| COMX CD | Bottom | 2x110 | 32-bit PCI bus and power and ground signals. |

3. GETTING STARTED

This section of the CME-Atom User Manual covers basic hardware setup, power connection, system boot-up, and initial software configuration. First-time CME-Atom users normally receive the product in conjunction with one of Diamond's Development Kits, which provide everything needed to ensure rapid application development.

Important Safe-Handling Information



WARNING: ESD-Sensitive Electronic Equipment!

Observe ESD-safe handling procedures when working with this product.


Always use this product in a properly grounded work area and wear appropriate ESD-preventive clothing and/or accessories.

Always store this product in ESD-protective packaging when not in use.

Please refer to page 3 of this manual ("Important Safe-Handling Information") for further details.

3.1 COM Express Development Kits

To facilitate evaluation and development, Diamond's COM Express are normally supplied in conjunction with one of Diamond's COM Express development kits (pictured below). This approach increases project efficiency and reduces risks by providing a known good environment for rapid application development.

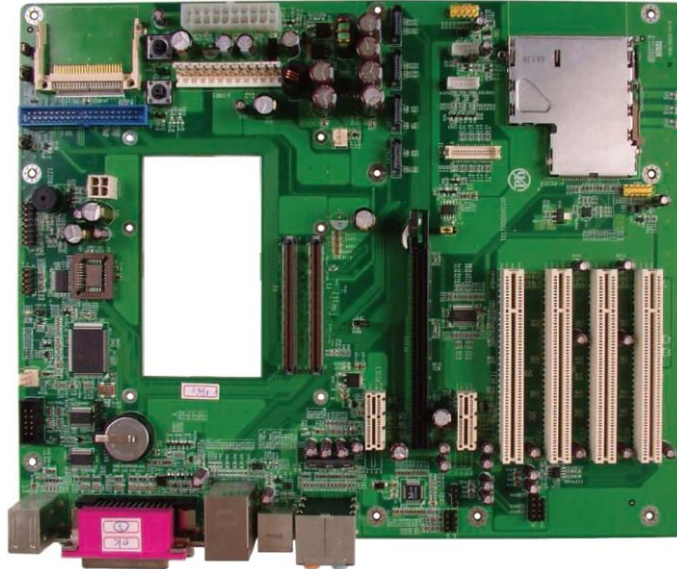

ATX form-factor COM Express Development Kit

The baseboards in Diamond's COM Express development kits provide standardized I/O connectors, for quick and easy access to nearly all system interfaces. They also feature a variety of expansion slots and sockets, for flexible system expansion. The kits – which include both generic models and application-oriented baseboards in various form-factors – also generally extend the COM Express module's functionality by adding Ethernet and serial ports, solid-state media sockets, and more. Additionally, the kits typically include an comprehensive set of interface cables, drivers for Linux and Windows operation, and full documentation.

3.2 Preparing the Hardware

If it is not already installed on the baseboard, carefully plug the CME-Atom into the baseboard's COM Express bus connectors. Place the heatsink or heat-spreader supplied with the CME-Atom on top of the module, carefully positioning it so that its mounting holes line up with those of the module. Then, affix the module and heatsink to the baseboard using the provided hardware.

Connect a USB keyboard, USB mouse, monitor, and mass storage devices to the appropriate connectors on the baseboard. Refer to the baseboard's User Manual for peripheral compatibility and interface cabling considerations.

3.3 Booting the System

Power-up the display, then power-up the system power supply.

The CME-Atom module should begin its boot-up sequence immediately, as evidenced by BIOS messages on the connected display. You can use the BIOS Setup utility and install an operating system on the boot drive just as you would on a normal desktop PC.

3.4 BIOS Setup Utility

The BIOS Setup utility program is used for specifying the system configurations and settings. The BIOS ROM of the system stores the Setup utility. When you turn on the computer, the BIOS is immediately activated. The following menus/options are available:

- **Main Setup Menu**
- **Advanced Setup Menu**
- **PCI/PnP Setup Menu**
- **Boot Setup Menu**
- **Security Setup Menu**
- **Chipset Setup Menu**
- **Exit**

Use the left/right arrow keys to highlight a particular configuration screen from the top menu bar, or use the down arrow key to access and configure the information in the menus which are described below.

3.4.1 Main Setup Menu

This menu allows you to select configuration options for the following:

- System Time
- System Date

3.4.2 Advanced Setup Menu

This menu allows you to select configuration options for the following:

- CPU Configuration – Settings for Hardware Prefetcher, Adjacent Cache Line Prefetch, Cache L1 & L2, Max CPUID Value Limit, Vanderpool Technology, Core Multi-Processing, and Intel® SpeedStep™ Tech.
- Mass Storage Configuration – Settings for hard drives (Primary/Secondary, Master/Slave).
- Floppy Configuration – Settings for the type of floppy drive installed on the system.
- Super IO Configuration – Settings for Onboard Floppy Controller, Serial Port1 / Port2 Address, Serial Port2 Mode, Parallel Port Address, Parallel Port Mode, Parallel Port IRQ, Restore on AC Power Loss by IO.
- Hardware Health Configuration – Settings for System/ CPU Temperature 1, CPU / System Fan Speed, Vcore (CPU voltage), +5.0V / +3.3V / +12.0V / 5Vsb / VBAT (standby and battery voltage).
- ACPI Configuration – Settings for Suspend mode.
- AHCI Configuration – Settings for AHCI Ports.
- APM Configuration – Settings for Power Management/APM, Video Power Down Mode, Hard Diks Power Down Mode, Suspend Time Out, Keyboard & PS/2 Mouse, Power Button Mode, Advanced Resume Event Controls.

- MPS Configuration – Settings for MPS Revision (multi-processor version control).
- USB Configuration – Settings for Legacy USB Support, USB 2.0 Controller Mode, BIOS EHCI Hand-Off, USB Mass Storage Reset Delay, Emulation Type (floppy/hard drive).
- Remote Access Configuration – Settings for Remote Access, Serial port number, Base Address IRQ.

3.4.3 PCI/PnP Settings Menu

This menu allows you to select configuration options for the following:

- Clear NVRAM
- Plug & Play O/S
- PCI Latency Timer
- Allocate IRQ to PCI VGA
- IRQ3 - IRQ15
- DMA Channel 0 - DMA Channel 7
- Reserved Memory Size

3.4.4 Boot Settings Menu

This menu allows you to select configuration options for the following:

- Boot Device Priority
- Hard Disk Drives
- Removable Drives
- Quick Boot
- Bootup Num-Lock
- LAN Boot Function

3.4.5 Security Settings Menu

This menu allows you to select configuration options for the following:

- Supervisor Password & User Password
- Boot Sector Virus Protection

3.4.6 Chipset Settings Menu

This menu allows you to select configuration options for the following:

- North Bridge Chipset Configuration – Settings for Boots Graphic Adapter Priority, Internal Graphic Mode Select, Video Function Configuration, DVMT Mode and Memory, Boot Display (CRT, LVDS), Flat Panel Type, TV Standard, Spread Spectrum Clock.

- South Bridge Chipset Configuration – Settings for USB Function (active ports), USB 2.0 Controller, HDA Controller, SLP_S4# Min. Assertion Width, Onboard LAN1.

3.4.7 Exit

This selection saves changes and exits the BIOS Setup Utility.

3.5 Operating System Drivers

Drivers for Windows XP and Linux 2.6, if required, are included on the Software and Documentation CD that is provided along with the CME-Atom or in its Development Kit. To locate the CME-Atom module's software drivers on the CD, view the index.html file in the CD's root directory, locate "Computer-on-Modules," and then click on "CME-Atom." This software is also available for download from [Diamond's website](#).

3.6 BIOS Beep Sounds List

| Post BIOS Beep Codes | |
|------------------------|---------------------------------------------------------------|
| <i>Number of Beeps</i> | <i>Description</i> |
| 1 | Memory refresh timer error. |
| 2 | Parity error in base memory (first 64KB block) |
| 3 | Base memory read/write test error |
| 4 | Motherboard timer not operational |
| 5 | Processor error |
| 6 | 8042 Gate A20 test error (cannot switch to protected mode) |
| 7 | General exception error (processor exception interrupt error) |
| 8 | Display memory error (system video adapter) |
| 9 | AMIBIOS ROM checksum error |
| 10 | CMOS shutdown register read/write error |

More BIOS information is included in the Appendix.

4. INTERFACE CONNECTOR DETAILS

This section describes the functions available on the COM Express AB and CD interface connectors.

Note: The COM Express specification is available from the PICMG organization (<http://www.picmg.org>). The COM Express Tutorial and COM Express Design Guide are available for download from the PICMG organization COM Express website located at: <http://www.picmg.org/v2internal/COMExpress.htm>.

4.1 COM Express AB Connector

The 2x110-pin, high-density COM Express AB connector implements the board's USB, PCI Express, SATA, LVDS, LPC, AC97 (audio), VGA (CRT), LAN, power and ground interfaces, and system and power management, as indicated in the table below. Further information regarding each of these signal groups follows the table. (Note: Pins designated "NC" should be left unconnected.)

| | | | | | | | |
|------------|-----|-----|----------------|--------------|-----|-----|--------------|
| GND | B1 | A1 | GND | USB7- | B36 | A36 | USB6- |
| GBE0_ACT# | B2 | A2 | GBE0_MDI3- | USB7+ | B37 | A37 | USB6+ |
| LPC_FRAME# | B3 | A3 | GBE0_MDI3+ | USB_4_5_OC# | B38 | A38 | USB_6_7_OC# |
| LPC_AD0 | B4 | A4 | GBE0_LINK100# | USB5- | B39 | A39 | USB4- |
| LPC_AD1 | B5 | A5 | GBE0_LINK1000# | USB5+ | B40 | A40 | USB4+ |
| LPC_AD2 | B6 | A6 | GBE0_MDI2- | GND | B41 | A41 | GND |
| LPC_AD3 | B7 | A7 | GBE0_MDI2+ | USB3- | B42 | A42 | USB2- |
| LPC_DRQ0# | B8 | A8 | NC | USB3+ | B43 | A43 | USB2+ |
| LPC_DRQ1# | B9 | A9 | GBE0_MDI1- | USB_0_1_OC# | B44 | A44 | USB_2_3_OC# |
| LPC_CLK | B10 | A10 | GBE0_MDI1+ | USB1- | B45 | A45 | USB0- |
| GND | B11 | A11 | GND | USB1+ | B46 | A46 | USB0+ |
| PWRBTN# | B12 | A12 | GBE0_MDI0- | EXCD1_PERST# | B47 | A47 | VCC_RTC |
| SMB_CK | B13 | A13 | GBE0_MDI0+ | EXCD1_CPPE# | B48 | A48 | EXCD0_PERST# |
| SMB_DAT | B14 | A14 | GBE0_CTREF | SYS_RESET# | B49 | A49 | EXCD0_CPPE# |
| SMB_ALERT# | B15 | A15 | SUS_S3# | CB_RESET# | B50 | A50 | LPC_SERIRQ |
| NC | B16 | A16 | SATA0_TX+ | GND | B51 | A51 | GND |
| NC | B17 | A17 | SATA0_TX- | NC | B52 | A52 | NC |
| SUS_STAT# | B18 | A18 | SUS_S4# | NC | B53 | A53 | NC |
| NC | B19 | A19 | SATA0_RX+ | GPO1 | B54 | A54 | GPI0 |
| NC | B20 | A20 | SATA0_RX- | NC | B55 | A55 | NC |
| GND | B21 | A21 | GND | NC | B56 | A56 | NC |
| NC | B22 | A22 | SATA2_TX+ | GPO2 | B57 | A57 | GND |
| NC | B23 | A23 | SATA2_TX- | NC | B58 | A58 | NC |
| PWR_OK | B24 | A24 | SUS_S5# | NC | B59 | A59 | NC |
| NC | B25 | A25 | SATA2_RX+ | GND | B60 | A60 | GND |
| NC | B26 | A26 | SATA2_RX- | PCIE_RX2+ | B61 | A61 | PCIE_TX2+ |
| WDT | B27 | A27 | BATLOW# | PCIE_RX2- | B62 | A62 | PCIE_TX2- |
| AC_SDIN2 | B28 | A28 | ATA_ACT# | GPO3 | B63 | A63 | GPI1 |
| AC_SDIN1 | B29 | A29 | AC_SYNC | PCIE_RX1+ | B64 | A64 | PCIE_TX1+ |
| AC_SDIN0 | B30 | A30 | AC_RST# | PCIE_RX1- | B65 | A65 | PCIE_TX1- |
| GND | B31 | A31 | GND | WAKE0# | B66 | A66 | GND |
| SPKR | B32 | A32 | AC_BITCLK | WAKE1# | B67 | A67 | GPI2 |
| I2C_CK | B33 | A33 | AC_SDOUT | PCIE_RX0+ | B68 | A68 | PCIE_TX0+ |
| I2C_DAT | B34 | A34 | BIOS_DISABLE# | PCIE_RX0- | B69 | A69 | PCIE_TX0- |
| THRM# | B35 | A35 | THRMTRIP# | GND | B70 | A70 | GND |

| | | | | | | | |
|------------------|-----|-----|---------------|-------------|------|------|---------|
| LVDS_B0+ | B71 | A71 | LVDS_A0+ | VGA_GRN | B91 | A91 | RSVD |
| LVDS_B0- | B72 | A72 | LVDS_A0- | VGA_BLU | B92 | A92 | RSVD |
| LVDS_B1+ | B73 | A73 | LVDS_A1+ | VGA_HSYNC | B93 | A93 | GPO0 |
| LVDS_B1- | B74 | A74 | LVDS_A1- | VGA_VSYNC | B94 | A94 | RSVD |
| LVDS_B2+ | B75 | A75 | LVDS_A2+ | VGA_I2C_CK | B95 | A95 | RSVD |
| LVDS_B2- | B76 | A76 | LVDS_A2- | VGA_I2C_DAT | B96 | A96 | GND |
| NC | B77 | A77 | LVDS_VDD_EN | TV_DAC_A | B97 | A97 | VCC_12V |
| NC | B78 | A78 | NC | TV_DAC_B | B98 | A98 | VCC_12V |
| LVDS_BKLT_EN | B79 | A79 | NC | TV_DAC_C | B99 | A99 | VCC_12V |
| GND | B80 | A80 | GND | GND | B100 | A100 | GND |
| LVDS_B_CK+ | B81 | A81 | LVDS_A_CK+ | VCC_12V | B101 | A101 | VCC_12V |
| LVDS_B_CK- | B82 | A82 | LVDS_A_CK- | VCC_12V | B102 | A102 | VCC_12V |
| CKLVDS_BKLT_CTRL | B83 | A83 | LVDS_I2C_CK | VCC_12V | B103 | A103 | VCC_12V |
| VCC_5V_SBY | B84 | A84 | LVDS_I2C_DAT | VCC_12V | B104 | A104 | VCC_12V |
| VCC_5V_SBY | B85 | A85 | GPI3 | VCC_12V | B105 | A105 | VCC_12V |
| VCC_5V_SBY | B86 | A86 | KBD_RST# | VCC_12V | B106 | A106 | VCC_12V |
| VCC_5V_SBY | B87 | A87 | KBD_A20GATE | VCC_12V | B107 | A107 | VCC_12V |
| RSVD | B88 | A88 | PCIE0_CK_REF+ | VCC_12V | B108 | A108 | VCC_12V |
| VGA_RED | B89 | A89 | PCIE0_CK_REF- | VCC_12V | B109 | A109 | VCC_12V |
| GND | B90 | A90 | GND | GND | B110 | A110 | GND |

4.1.1 USB signals

These pins provide connections to the board's eight USB channels. For further information regarding the functions of the USB signals listed above, refer to the USB 2.0 Specification, available from the USB Implementers Forum (<http://www.usb.org>).

| Signal Name | Signal Function | Direction |
|------------------------|----------------------------------------------------|------------------|
| USB[0:7]+ USB[0:7]- | USB differential pairs, data channels 0 through 7. | I/O |
| USB_0_1_OC# | USB over-current sense, USB channels 0 and 1. | I |
| USB_2_3_OC# | USB over-current sense, USB channels 2 and 3. | I |
| USB_4_5_OC# | USB over-current sense, USB channels 4 and 5. | I |
| USB_6_7_OC# | USB over-current sense, USB channels 6 and 7. | I |

4.1.2 Gigabit Ethernet (LAN)

These pins provide connections to the GigE (LAN) interface.

| Signal Name | Signal Function | Direction |
|----------------------------------|--------------------------------------------------------------------------------------|------------------|
| GBE0_MDI[0:3]+ GBE0_MDI[0:3]- | Gigabit Ethernet Controller 0: Media Dependent Interface Differential Pairs 0,1,2,3. | I/O |
| GBE0_ACT# | Gigabit Ethernet Controller 0 activity indicator. | OD |
| GBE0_LINK# | Gigabit Ethernet Controller 0 link indicator. | OD |
| GBE0_LINK100# | Gigabit Ethernet Controller 0 100 Mbit / sec link indicator. | OD |
| GBE0_LINK1000# | Gigabit Ethernet Controller 0 1000 Mbit / sec link indicator. | OD |
| GBE0_CTREF | Reference voltage for carrier board Ethernet channel 0 magnetics center tap. | REF |

4.1.3 AC97 Audio/High Definition Audio

These pins provide connections to the high definition audio interface.

| Signal Name | Signal Function | Direction |
|--------------------|------------------------------------------------------------------|------------------|
| AC_RST# | Reset output to AC97 CODEC. | O |
| AC_SYNC | 48kHz fixed-rate, sample-synchronization signal to the CODEC(s). | O |
| AC_BITCLK | 12.228 MHz serial data clock generated by the external CODEC(s). | I/O |
| AC_SDOUT | Serial TDM data output to the CODEC. | O |
| AC_SDIN[0:2] | Serial TDM data inputs from up to 3 CODECs/ | I |

4.1.4 PCI Express

These pins provide connections to the PCI Express interface and card.

| Signal Name | Signal Function | Direction |
|--------------------------------|-----------------------------------------------------|------------------|
| PCIE_TX[0:3]+ PCIE_TX[0:3]- | PCI Express Differential Transmit Pairs 0 through 3 | O |
| PCIE_RX[0:3]+ PCIE_RX[0:3]- | PCI Express Differential Receive Pairs 0 through 3 | I |
| PCIE_CLK_REF+/- | PCI Express Clock Reference. | I |
| EXCD_CPPE[0:1] | PCI Express Card. | I |
| EXCD_RST[0:1]# | PCI Express Card reset. | I |

4.1.5 SATA

These pins carry the Serial ATA signals.

| Signal Name | Signal Function | Direction |
|------------------------|---------------------------------------------------------|------------------|
| SATA0_TX+ SATA0_TX- | Serial ATA or SAS Channel 0 transmit differential pair. | O |
| SATA0_RX+ SATA0_RX- | Serial ATA or SAS Channel 0 receive differential pair. | I |
| SATA2_TX+ SATA2_TX- | Serial ATA or SAS Channel 2 transmit differential pair. | O |
| SATA2_RX+ SATA2_RX- | Serial ATA or SAS Channel 2 receive differential pair. | I |
| ATA_ACT# | ATA (parallel and serial) or SAS activity indicator. | O |

4.1.6 General Purpose Inputs and Outputs (GPIO)

These pins carry four general purpose input lines and four general purpose outputs.

| Signal Name | Signal Function | Direction |
|--------------------|------------------------------|------------------|
| GPO[0:3] | General purpose output pins. | O |
| GPI[0:3] | General purpose input pins. | I |

4.1.7 Power and System Management

These pins support various power management and control functions.

| Signal Name | Signal Function | Direction |
|--------------------|--------------------------------------------------------------------------------------------------------------|------------------|
| PWRBTN# | Power button to bring system out of S5 (soft off), active on rising edge. | I |
| SYS_RESET# | Reset button input. | I |
| CB_RESET# | Reset output from module to carrier board. | O |
| PWR_OK | Power OK from main power supply. | I |
| SUS_STAT# | Indicates imminent suspend operation; used to notify LPC devices. | O |
| SUS_S3# | Indicates system is in Suspend to RAM state. | O |
| SUS_S4# | Indicates system is in Suspend to Disk state. | O |
| SUS_S5# | Indicates system is in Soft Off state. Also known as "PS_ON" and can be used to control an ATX power supply. | O |
| WAKE0# | PCI Express wake up signal. | I |
| WAKE1# | General purpose wake up signal. | I |
| BATLOW# | Indicates that external battery is low. | I |
| THRM# | Input from off-module temp sensor indicating an over-temp situation. | I |
| THERMTRIP# | Active low output indicating that the CPU has entered thermal shutdown. | O |
| SMB_CK | System Management Bus bidirectional clock line. | I/O |
| SMB_DAT | System Management Bus bidirectional data line. | I/O |
| SMB_ALERT# | System Management Bus Alert.. | I |

4.1.8 LVDS Flat Panel

These pins carry data for graphical display on an LVDS panel, as indicated.

| Signal Name | Signal Function | Direction |
|------------------------------|-----------------------------------------|------------------|
| LVDS_A[0:3]+ LVDS_A[0:3]- | LVDS Channel A differential pairs | O |
| LVDS_A_CK+ LVDS_A_CK- | LVDS Channel A differential clock | O |
| LVDS_B[0:3]+ LVDS_B[0:3]- | LVDS Channel B differential pairs | O |
| LVDS_B_CK+ LVDS_B_CK- | LVDS Channel B differential clock | O |
| LVDS_VDD_EN | LVDS panel power enable | O |
| LVDS_BKLT_EN | LVDS panel backlight enable | O |
| LVDS_BKLT_CTRL | LVDS panel backlight brightness control | O |
| LVDS_I2C_CK | I2C clock output for LVDS display use. | O |
| LVDS_I2C_DAT | I2C data line for LVDS display use. | I/O |

4.1.9 LPC Interface

These pins carry the Low Pin Count (LPC) interface signals, as indicated.

| Signal Name | Signal Function | Direction |
|--------------------|-----------------------------------------------|------------------|
| LPC_AD[0:3] | LPC multiplexed address, command and data bus | I/O |
| LPC_FRAME# | LPC frame indicates the start of an LPC cycle | O |
| LPC_DRQ[0:1]# | LPC serial DMA request | I |
| LPC_SERIRQ | LPC serial interrupt | I/O |
| LPC_CLK | LPC clock output. | O |

4.1.10 Analog VGA (CRT)

These pins carry video and timing data for graphical display on a TV device, as indicated.

| Signal Name | Signal Function | Direction |
|--------------------|-------------------------------------------------------------------------------------|------------------|
| VGA_RED | Red for monitor. Analog DAC output, designed to drive a 37.5-Ohm equivalent load. | O |
| VGA_GRN | Green for monitor. Analog DAC output, designed to drive a 37.5-Ohm equivalent load. | O |
| VGA_BLU | Blue for monitor. Analog DAC output, designed to drive a 37.5-Ohm equivalent load. | O |
| VGA_HSYNC | Horizontal sync output to VGA monitor | O |
| VGA_VSYNC | Vertical sync output to VGA monitor | O |
| VGA_I2C_CK | DDC clock line (I2C port dedicated to identify VGA monitor capabilities) | O |
| VGA_I2C_DAT | DDC data line. | I/O |

4.1.11 TV Out

These pins carry the composite video out signals.

| Signal Name | Signal Function | Direction |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| TV_DAC_A | TVDAC Channel A Output supports the following: Composite video: CVBS Component video: Chrominance (Pb) analog signal S-Video: not used | O |
| TV_DAC_B | TVDAC Channel B Output supports the following: Composite video: not used Component video: Luminance (Y) analog signal. S-Video: Luminance analog signal. | O |
| TV_DAC_C | TVDAC Channel C Output supports the following: Composite video: not used Component: Chrominance (Pr) analog signal. S-Video: Chrominance analog signal. | O |

4.1.12 Miscellaneous Signals

These pins carry the I2C bus plus a number of utility signals.

| Signal Name | Signal Function | Direction |
|--------------------|--------------------------------------------------------------------------------------|------------------|
| I2C_CK | General purpose I2C port clock output. | O |
| I2C_DAT | General purpose I2C port data I/O line. | I/O |
| SPKR | Output for audio enunciator - the "speaker" in PC-AT systems | O |
| BIOS_DISABLE# | Module BIOS disable input. | I |
| WDT | Output indicating that a watchdog time-out event has occurred. | O |
| KBD_RST# | Input to module from (optional) external keyboard controller that can force a reset. | I |
| KBD_A20GATE | Input to module from (optional) external keyboard controller. | I |

4.2 COM Express CD Connector

The 210-pin, high-density COM Express CD connector implements IDE, PCI bus, and power and ground signals, as indicated in the table below. (Note: Pins designated “NC” should be left unconnected; additionally IDE currently is not supported on the CME-Atom.)

| | | | | | | | |
|------------|-----|-----|------------|-------------|-----|-----|-------------|
| GND | D1 | C1 | GND | PCI_FRAME# | D36 | C36 | PCI_DEVSEL# |
| IDE_D5 | D2 | C2 | IDE_D7 | PCI_AD16 | D37 | C37 | PCI_IRDY# |
| IDE_D10 | D3 | C3 | IDE_D6 | PCI_AD18 | D38 | C38 | PCI_C/BE2# |
| IDE_D11 | D4 | C4 | IDE_D3 | PCI_AD20 | D39 | C39 | PCI_AD17 |
| IDE_D12 | D5 | C5 | IDE_D15 | PCI_AD22 | D40 | C40 | PCI_AD19 |
| IDE_D4 | D6 | C6 | IDE_D8 | GND | D41 | C41 | GND |
| IDE_D0 | D7 | C7 | IDE_D9 | PCI_AD24 | D42 | C42 | PCI_AD21 |
| IDE_REQ | D8 | C8 | IDE_D2 | PCI_AD26 | D43 | C43 | PCI_AD23 |
| IDE_IOW# | D9 | C9 | IDE_D13 | PCI_AD28 | D44 | C44 | PCI_C/BE3# |
| IDE_ACK# | D10 | C10 | IDE_D1 | PCI_AD30 | D45 | C45 | PCI_AD25 |
| GND | D11 | C11 | GND | PCI_IRQC# | D46 | C46 | PCI_AD27 |
| IDE_IRQ | D12 | C12 | IDE_D14 | PCI_IRQD# | D47 | C47 | PCI_AD29 |
| IDE_A0 | D13 | C13 | IDE_IORDY | PCI_CLKRUN# | D48 | C48 | PCI_AD31 |
| IDE_A1 | D14 | C14 | IDE_IOR# | PCI_M66EN | D49 | C49 | PCI_IRQA# |
| IDE_A2 | D15 | C15 | PCI_PME# | PCI_CLK | D50 | C50 | PCI_IRQB# |
| IDE_CS1# | D16 | C16 | PCI_GNT2# | GND | D51 | C51 | GND (FIXED) |
| IDE_CS3# | D17 | C17 | PCI_REQ2# | NC | D52 | C52 | NC |
| IDE_RESET# | D18 | C18 | PCI_GNT1# | NC | D53 | C53 | NC |
| PCI_GNT3# | D19 | C19 | PCI_REQ1# | NC | D54 | C54 | TYPE0# |
| PCI_REQ3# | D20 | C20 | PCI_GNT0# | NC | D55 | C55 | NC |
| GND | D21 | C21 | GND | NC | D56 | C56 | NC |
| PCI_AD1 | D22 | C22 | PCI_REQ0# | TYPE2# | D57 | C57 | TYPE1# |
| PCI_AD3 | D23 | C23 | PCI_RESET# | NC | D58 | C58 | NC |
| PCI_AD5 | D24 | C24 | PCI_AD0 | NC | D59 | C59 | NC |
| PCI_AD7 | D25 | C25 | PCI_AD2 | GND | D60 | C60 | GND |
| PCI_C/BE0# | D26 | C26 | PCI_AD4 | NC | D61 | C61 | NC |
| PCI_AD9 | D27 | C27 | PCI_AD6 | NC | D62 | C62 | NC |
| PCI_AD11 | D28 | C28 | PCI_AD8 | RSVD | D63 | C63 | RSVD |
| PCI_AD13 | D29 | C29 | PCI_AD10 | RSVD | D64 | C64 | RSVD |
| PCI_AD15 | D30 | C30 | PCI_AD12 | NC | D65 | C65 | NC |
| GND | D31 | C31 | GND | NC | D66 | C66 | NC |
| PCI_PAR | D32 | C32 | PCI_AD14 | GND | D67 | C67 | RSVD |
| PCI_SERR# | D33 | C33 | PCI_C/BE1# | NC | D68 | C68 | NC |
| PCI_STOP# | D34 | C34 | PCI_PERR# | NC | D69 | C69 | NC |
| PCI_TRDY# | D35 | C35 | PCI_LOCK# | GND | D70 | C70 | GND |

| | | | | | | | |
|------------|-----|-----|------|---------|------|------|---------|
| NC | D71 | C71 | NC | NC | D91 | C91 | NC |
| NC | D72 | C72 | NC | NC | D92 | C92 | NC |
| NC | D73 | C73 | NC | GND | D93 | C93 | GND |
| NC | D74 | C74 | NC | NC | D94 | C94 | NC |
| NC | D75 | C75 | NC | NC | D95 | C95 | NC |
| GND | D76 | C76 | GND | GND | D96 | C96 | GND |
| IDE_CBLID# | D77 | C77 | RSVD | NC | D97 | C97 | RSVD |
| NC | D78 | C78 | NC | NC | D98 | C98 | NC |
| NC | D79 | C79 | NC | NC | D99 | C99 | NC |
| GND | D80 | C80 | GND | GND | D100 | C100 | GND |
| NC | D81 | C81 | NC | NC | D101 | C101 | NC |
| NC | D82 | C82 | NC | NC | D102 | C102 | NC |
| RSVD | D83 | C83 | RSVD | GND | D103 | C103 | GND |
| GND | D84 | C84 | GND | VCC_12V | D104 | C104 | VCC_12V |
| NC | D85 | C85 | NC | VCC_12V | D105 | C105 | VCC_12V |
| NC | D86 | C86 | NC | VCC_12V | D106 | C106 | VCC_12V |
| GND | D87 | C87 | GND | VCC_12V | D107 | C107 | VCC_12V |
| NC | D88 | C88 | NC | VCC_12V | D108 | C108 | VCC_12V |
| NC | D89 | C89 | NC | VCC_12V | D109 | C109 | VCC_12V |
| GND | D90 | C90 | GND | GND | D110 | C110 | GND |

4.2.1 IDE

Note: IDE currently is not supported on the CME-Atom.

| Signal Name | Signal Function | Direction |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| IDE_D[0:15] | Bidirectional data to / from IDE device. | I/O |
| IDE_A[0:2] | Address lines to IDE device. | O |
| IDE_IOW# | I/O write line to IDE device. Data latched on trailing (rising) edge. | O |
| IDE_IOR# | I/O read line to IDE device. | O |
| IDE_REQ | IDE Device DMA Request. It is asserted by the IDE device to request a data transfer. | I |
| IDE_ACK# | IDE Device DMA Acknowledge. | O |
| IDE_CS1# | IDE Device Chip Select for 1F0h to 1FFh range. | O |
| IDE_CS3# | IDE Device Chip Select for 3F0h to 3FFh range. | O |
| IDE_IORDY | IDE device I/O ready input. | I |
| IDE_RESET# | Reset output to IDE device. | O |
| IDE_IRQ | Interrupt request from IDE device. | I |
| IDE_CBLID# | Input from off-module hardware indicating the type of IDE cable being used. High indicates a 40-pin cable used for legacy IDE modes. Low indicates that an 80-pin cable with interleaved grounds is used. Such a cable is required for Ultra-DMA 66,100 and 133 modes. | I |

4.2.2 PCI Bus Interface

This set of pins implements the module's PCI expansion bus. For further information regarding the functions of the PCI bus signals, refer to the PCI Bus Specification, available from the PCI Special Interest Group (<http://www.pcisig.com/specifications>).

| Signal Name | Signal Function | Direction |
|--------------------|----------------------------------------------------------------------------------------------------|------------------|
| PCI_AD[0:31] | PCI bus multiplexed address and data lines | I/O |
| PCI_C/BE[0:3]# | PCI bus byte enable lines, active low | I/O |
| PCI_DEVSEL# | PCI bus Device Select. | I/O |
| PCI_FRAME# | PCI bus Frame control line. | I/O |
| PCI_IRDY# | PCI bus Initiator Ready control line. | I/O |
| PCI_TRDY# | PCI bus Target Ready control line. | I/O |
| PCI_STOP# | PCI bus STOP control line. | I/O |
| PCI_PAR | PCI bus parity | I/O |
| PCI_PERR# | Parity Error:. | I/O |
| PCI_REQ[0:3]# | PCI bus master request input lines. | I |
| PCI_GNT[0:3]# | PCI bus master grant output lines. | O |
| PCI_RESET# | PCI Reset output. | O |
| PCI_LOCK# | PCI Lock control line. | I/O |
| PCI_SERR# | System Error: SERR# may be pulsed active by any PCI device that detects a system error condition. | I/O |
| PCI_PME# | PCI Power Management Event: PCI peripherals drive PME# to wake system from low-power states S1–S5. | I |
| PCI_CLKRUN# | Bidirectional pin used to support PCI clock run protocol for mobile systems. | I/O |
| PCI_IRQ[A:D]# | PCI interrupt request lines. | I |
| PCI_CLK | PCI 33MHz clock output. | O |
| PCI_M66EN | Pull down strap. | I |

5. APPENDIX: SYSTEM RESOURCES REFERENCE

5.1 BIOS Memory Mapping

| Address | Device Description |
|----------------|----------------------------------|
| 00000h-9FFFFh | DOS Kernel Area |
| A0000h,BFFFFh | EGA and VGA Video Buffer (128KB) |
| C0000h-CFFFFh | EGA/VGA ROM |
| D0000h-DFFFFh | Adaptor ROM |
| E0000h-FFFFFFh | System BIOS |

5.2 I/O Port Address Map

Each peripheral device in the system is assigned a set of I/O port addresses which also becomes the identity of the device. The following table lists the I/O port addresses used. (**Note:** IDE currently is not supported on the CME-Atom.)

| Address | Device Description |
|----------------|-----------------------------------|
| 0000h - 0000Fh | DMA Controller |
| 0080h - 009Fh | DMA Controller |
| 00C0h - 00DFh | DMA Controller |
| 0020h, 0021h | Programmable Interrupt Controller |
| 00A0h, 00A1h | Programmable Interrupt Controller |
| 0040h - 0043h | System Timer |
| 0044h - 0047h | System Timer |
| 0060h - 0064h | Keyboard Controller |
| 0070h - 0073h | System CMOS/Real Time Clock |
| 00F0h - 00FFh | Math Co-Processor |
| 01F0h-01F7h | Primary IDE |
| 0274h-0277h | ISAPNP Read Data Port |
| 0279h , 0A79h | ISAPnP Configuration |
| 02F8h-02FFh | COM_2 (If use) |
| 0378h-037Ah | Parallel Port (If use) |

| | |
|-------------|------------------------------|
| 03B0h-03BFh | MDA/MGA |
| 03C0h-03CFh | EGA/VGA |
| 03D4h-03D9h | CGA CRT register |
| 03F0h-03F7h | Floppy Diskette |
| 03F6h-03F6h | Primary IDE |
| 03F8h-03FFh | COM_1 (If use) |
| 0400h-041F | South Bridge SMB |
| 04D0h-04D1h | IRQ Edge/level control ports |
| 0500h-053Fh | South Bridge GPIO |
| 0800h-087Fh | ACPI |
| 0A00h-0A07h | PME |
| 0A10h-0A17h | Hardware Monitor |
| 0CF8h | PCI Configuration address |
| 0CFCh | PCI Configuration Data |

5.3 Interrupt Request (IRQ) Lines

Peripheral devices use interrupt request lines to notify CPU for the service required. The following table shows the IRQ used by the devices on board.

| <i>IRQ Level</i> | <i>Function</i> |
|------------------|---------------------------------------------------------|
| IRQ 00 | System Timer |
| IRQ 01 | Standard 101/102-Key or Microsoft Natural PS/2 Keyboard |
| IRQ 02 | VGA and Link to Secondary PIC |
| IRQ 03 | Communications Port (COM2) |
| IRQ 04 | Communications Port (COM1) |
| IRQ 05 | PCI Device |
| IRQ 06 | Standard floppy disk controller |
| IRQ 07 | Parallel Port |
| IRQ 08 | System CMOS/real time clock |
| IRQ 09 | Microsoft ACPI-Compliant System |
| IRQ 10 | PCI Device |
| IRQ 11 | PCI Device |

| | |
|--------|-----------------------|
| IRQ 12 | PS/2 Compatible Mouse |
| IRQ 13 | PFY exception |
| IRQ 14 | Primary IDE Channel |
| IRQ 15 | PCI Device |

5.4 BIOS Beep Codes

This section contains BIOS codes and troubleshooting information.

5.4.1 Boot Block Beep Codes

| <i>Number of Beeps</i> | <i>Description</i> |
|------------------------|---------------------------------------------------------------------|
| 1 | Insert diskette in floppy drive A: |
| 2 | 'AMIBOOT.ROM' file not found in root directory of diskette in A: |
| 3 | Insert next diskette if multiple diskettes are used for Recovery |
| 4 | Flash Programming successful |
| 5 | Floppy read error |
| 6 | Keyboard controller BAT command failed |
| 7 | No Flash EPROM detected |
| 8 | Floppy controller failure |
| 9 | Boot Block BIOS checksum error |
| 10 | Flash Erase error |
| 11 | Flash Program error |
| 12 | 'AMIBOOT.ROM' file size error |

5.4.2 Post BIOS Beep Codes

| <i>Number of Beeps</i> | <i>Description</i> |
|------------------------|-----------------------------|
| 1 | Memory refresh timer error. |

| | |
|----|---------------------------------------------------------------|
| 2 | Parity error in base memory (first 64KB block) |
| 3 | Base memory read/write test error |
| 4 | Motherboard timer not operational |
| 5 | Processor error |
| 6 | 8042 Gate A20 test error (cannot switch to protected mode) |
| 7 | General exception error (processor exception interrupt error) |
| 8 | Display memory error (system video adapter) |
| 9 | AMIBIOS ROM checksum error |
| 10 | CMOS shutdown register read/write error |

5.4.3 Troubleshooting Post BIOS Beep Codes

| <i>Number of Beeps</i> | <i>Description</i> |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1, 2 or 3 | Reseat the memory, or replace with known good modules. |
| 4-7, 9-11 | <p>Fatal error indicating a serious problem with the system. Consult your system manufacturer. Before declaring the motherboard beyond all hope, eliminate the possibility of interference by a malfunctioning add-in card. Remove all expansion cards except the video adapter.</p> <ul style="list-style-type: none"> • If beep codes are generated when all other expansion cards are absent, consult your system manufacturer's technical support. • If beep codes are not generated when all other expansion cards are absent, one of the add-in cards is causing the malfunction. Insert the cards back into the system one at a time until the problem |
| 8 | If the system video adapter is an add-in card, replace or reset the video adapter. If the video adapter is an integrated part of the system board, the board may be faulty. |

5.4.4 Bootblock Initialization Code Checkpoints

| Checkpoint | Description |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Before D0 | If boot block debugger is enabled, CPU cache-as-RAM functionality is enabled at this point. Stack will be enabled from this point. |
| D0 | Early Boot Strap Processo (BSP) initialization like microcode update, frequency and other CPU cirtical initialization. Early chipset initialization is done. |
| D1 | Early super I/O initialization is done including RTC and keyboard controller. Serial port is enabled at this point if needed for debugging. NMI is deisabled. Perfrom keyboard controller BAT test. Save power-on CPUID value in scretch CMOS. Go to flat mode with 4GB limit and GA20 enabled. |
| D2 | Verify the boot block checksum. System will hang here if checksum is bad. |
| D3 | Disable CACHE before memory detection. Execute full memory sizing module. If memory sizing module not executed, start memory refresh and do memory sizing in Boot block code. Do additional chipset initialization. Reenabled CACHE. Verify that flat mode is enabled. |
| D4 | Test base 512KB memory. Adjust policies and cache first 8MB. Set stack. |
| D5 | Bootblock code is copied from ROM to lower system memory and control is given to it. BIOS now executes out of RAM. Copies compressed boot block code to memory in right segments. Copies BIOS from ROM to RAM for faster access. Perfoms main BIOS checksum and updates recovery status accordingly. |
| D6 | Both key sequence and OEM specific method is checked to determine if BIOS recovery is forced. If BIOS recovery is necessary, control flows tocheckpoint E0. Seed <i>Bootblock Recovery Code Checkpoints</i> section of document for more information. |
| D7 | Restore CPUID value back into register. The Bootblock-Runtime interface module is moved to system memory and control is given to it. Determine whether in memory. |
| D8 | The Tuntime module is uncompressed into memory. CPUID information is stored in memory. |
| D9 | Store the Uncompressed pointer for future use in PMM. Copying Main BIOS into memory. Leaves all RAM below 1MB Read-Write including E000 and F000 shadow areas but closing SMRAM. |
| DA | Restore CPUID value back into register. Give control to BIOS POS (ExecutePOSTKernel). See <i>POST Code Checkpoints</i> section of document for more information. |
| DC | System is saking from ACPI S3 state. |
| E1 - E8 EC - EE | OEM memory detection / configuration error. This range is reserved for chipset vendors & system manufacturers. The error associated with this value may be different from one platform to be next. |

5.4.5 Bootlock Recovery Code Checkpoints

The Bootblock recovery code gets control when the BIOS determines that a BIOS recovery needs to occur because the user has forced the update or the BIOS checksum is corrupt. The following table describes the type of checkpoints that may occur during the Bootblock recovery portion of the BIOS.

| Checkpoint | Description |
|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| E0 | Initialize the floppy controller in the super I/O. Some interrupt vectors are initialized. DMA controller is initialized. 8259 interrupt controller is initialized. L2 cache is enabled. |
| E9 | Set up floppy controller and data. Attempt to read from floppy. |
| EA | Enable ATAPI hardware. Attempt to read from ARMD and ATAPI CDROM. |
| EB | Disable ATAPI hardware. Jump back to checkpoint E9. |
| EF | Read error occurred on media. Jump back to checkpoint EB. |
| F0 | Search for pre-defined recovery file name in root directory. |
| F1 | Recovery file not found. |
| F2 | Start reading FAT table and analyze FAT to find the clusters occupied by the recovery file. |
| F3 | Start reading the recovery file cluster by cluster. |
| F5 | Disable L1 cache. |
| FA | Check the validity of the recovery file configuration to the current configuration of the flash part. |
| FB | Make flash write enabled through chipset and OEM specific method. Detect proper flash part. Verify that the found flash part size equals the recovery file size. |
| F4 | The recovery file size does not equal the found flash part size. |
| FC | Erase the flash part. |
| FD | Program the flash part. |
| FF | The flash has been updated successfully. Make flash write disabled. Disable ATAPI hardware. Restore CPUID value back into register. Give control to F000 ROM at F000:FFF0h. |

5.4.6 POST Code Checkpoints

The POST code checkpoints are the largest set of checkpoints during the BIOS pre-boot process. The following table describes the type of checkpoints that may occur during the POST portion of the BIOS.

| Checkpoint | Description |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 03 | Disable NMI, Parity, video for EGA, and DMA controllers. Initialize BIOS, POST, Runtime data area. Also initialize BIOS modules on POST entry and GPNV area. Initialized CMOS as mentioned in the Kernel Variable "wCMOSFlags." |
| 04 | Check CMOS diagnostic byte to determine if battery power is OK and CMOS checksum is OK. Verify CMOS checksum manually by reading storage area. If the CMOS checksum is bad, update CMOS with power-on default values and clear passwords. Initialize status register A. Initializes data variables that are based on CMOS setup questions. Initializes both the 8259 compatible PICs in the system. |
| 05 | Initializes the interrupt controlling hardware (generally PIC) and interrupt vector table. |
| 06 | Do R/W test to CH-2 count reg. Initialize CH-0 as system timer. Install the POSTINT1Ch handler. Enable IRQ-0 in PIC for system timer interrupt. Traps INT1Ch vector to "POSTINT1ChHandlerBlock." 07 Fixes CPU POST interface calling pointer. |
| 07 | Fixes CPU POST interface calling pointer. |
| 08 | Initializes the CPU. The BAT test is being done on KBC. Program the keyboard controller command byte is being done after Auto detection of KB/MS using AMI KB-5. |
| C0 | Early CPU Init Start -- Disable Cache - Init Local APIC |
| C1 | Set up boot strap processor Information |
| C2 | Set up boot strap processor for POST |
| C5 | Enumerate and set up application processors |
| C6 | Re-enable cache for boot strap processor |
| C7 | Early CPU Init Exit |
| 0A | Initializes the 8042 compatible Key Board Controller. |
| 0B | Detects the presence of PS/2 mouse. |
| 0C | Detects the presence of Keyboard in KBC port. |
| 0E | Testing and initialization of different Input Devices. Also, update the Kernel Variables. Traps the INT09h vector, so that the POST INT09h handler gets control for IRQ1. Uncompress all available language, BIOS logo, and Silent logo modules. |
| 13 | Early POST initialization of chipset registers. |
| 20 | Relocate System Management Interrupt vector for all CPU in the system. |
| 24 | Uncompress and initialize any platform specific BIOS modules. GPNV is initialized at this checkpoint. |

| | |
|----|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2A | Initializes different devices through DIM. See DIM Code Checkpoints section of document for more information. |
| 2C | Initializes different devices. Detects and initializes the video adapter installed in the system that have optional ROMs. |
| 2E | Initializes all the output devices. |
| 31 | Allocate memory for ADM module and uncompress it. Give control to ADM module for initialization. Initialize language and font modules for ADM. Activate ADM module. |
| 33 | Initializes the silent boot module. Set the window for displaying text information. |
| 37 | Displaying sign-on message, CPU information, setup key message, and any OEM specific information. |
| 38 | Initializes different devices through DIM. See DIM Code Checkpoints section of document for more information. USB controllers are initialized at this point. |
| 39 | Initializes DMAC-1 & DMAC-2. |
| 3A | Initialize RTC date/time. |
| 3B | Test for total memory installed in the system. Also, Check for DEL keys to limit memory test. Display total memory in the system. |
| 3C | Mid POST initialization of chipset registers. |
| 40 | Detect different devices (Parallel ports, serial ports, and Coprocessor in CPU, ... etc.) successfully installed in the system and update the BDA, EBDA...etc. |
| 52 | Updates CMOS memory size from memory found in memory test. Allocates memory for Extended BIOS Data Area from base memory. Programming the memory hole or any kind of implementation that needs an adjustment in system RAM size if needed. |
| 60 | Initializes NUM-LOCK status and programs the KBD typematic rate. |
| 75 | Initialize Int-13 and prepare for IPL detection. |
| 78 | Initializes IPL devices controlled by BIOS and option ROMs. |
| 7C | Generate and write contents of ESCD in NVRam. |
| 84 | Log errors encountered during POST. |
| 85 | Display errors to the user and gets the user response for error. |
| 87 | Execute BIOS setup if needed / requested. Check boot password if installed. |
| 8C | Late POST initialization of chipset registers. |
| 8D | Build ACPI tables (if ACPI is supported) |
| 8E | Program the peripheral parameters. Enable/Disable NMI as selected. |
| 90 | Initialization of system management interrupt by invoking all handlers. |

| | |
|----|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| A1 | Lian-up work needed before booting to OS. |
| A2 | Takes care of runtime image preparation for different BIOS modules. Fill the free area in F000h segment with 0FFh. Initializes the Microsoft IRQ Routing Table. Prepares the runtime language module. Disables the system configuration display if needed. |
| A4 | Initialize runtime language module. Display boot option popup menu. |
| A7 | Displays the system configuration screen if enabled. Initialize the CPU's before boot, which includes the programming of the MTRR's. |
| A9 | Wait for userinput at config display if needed. |
| AA | Uninstall POST INT1Ch vector and INT09h vector. |
| AB | Prepare BBS for Int 19 boot. Init MP tables. |
| AC | End of POST initialization of chipset registers. De-initializes the ADM module. |
| B1 | Save system context for ACPI. Prepare CPU for OS boot including final MTRR values. |
| 00 | Passes control to OS Loader (typically INT19h). |

5.4.7 DIM Code Checkpoints

The Device Initialization Manager (DIM) gets control at various times during BIOS POST to initialize different system buses. The following table describes the main checkpoints where the DIM module is accessed.

| Checkpoint | Description |
|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2A | <p>Initialize different buses and perform the following functions:</p> <p>Reset, Detect, and Disable (function 0); Static Device Initialization (function 1); Boot Output Device Initialization (function 2). Function 0 disables all device nodes, PCI devices, and PnP ISA cards. It also assigns PCI bus numbers.</p> <p>Function 1 initializes all static devices that include manual configured onboard peripherals, memory and I/O decode windows in PCI-PCI bridges, and noncompliant PCI devices.</p> <p>Static resources are also reserved. Function 2 searches for and initializes any PnP, PCI, or AGP video devices.</p> |
| 38 | <p>Initialize different buses and perform the following functions:</p> <p>Boot Input Device Initialization (function 3); IPL Device Initialization (function 4); General Device Initialization (function 5). Function 3 searches for and configures PCI input devices and detects if system has standard keyboard controller.</p> <p>Function 4 searches for and configures all PnP and PCI boot devices. Function 5 configures all onboard peripherals that are set to an automatic configuration and configures all remaining PnP and PCI devices.</p> <p>While control is in the different functions, additional checkpoints are output to port 80h as a word value to identify the routines under execution. The low byte value indicates the main POST Code Checkpoint. The high byte is divided into two nibbles and contains two fields. The details of the high byte of these checkpoints are as follows:</p> <p>HIGH BYTE XY</p> <p>The upper nibble "X" indicates the function number that is being executed.</p> <p>"X" can be from 0 to 7.</p> <p>0 = func#0, disable all devices on the BUS concerned.</p> <p>2 = func#2, output device initialization on the BUS concerned.</p> <p>3 = func#3, input device initialization on the BUS concerned.</p> <p>4 = func#4, IPL device initialization on the BUS concerned.</p> <p>5 = func#5, general device initialization on the BUS concerned.</p> <p>6 = func#6, error reporting for the BUS concerned.</p> <p>7 = func#7, add-on ROM initialization for all BUSes.</p> |

8 = func#8, BBS ROM initialization for all BUSES.

The lower nibble 'Y' indicates the BUS on which the different routines are being executed. 'Y' can be from 0 to 5.

0 = Generic DIM (Device Initialization Manager).

1 = On-board System devices.

2 = ISA devices.

3 = EISA devices.

4 = ISA PnP devices.

5 = PCI devices.

5.4.8 ACPI Runtime Checkpoints

ACPI checkpoints are displayed when an ACPI capable operating system either enters or leaves a sleep state. The following table describes the type of checkpoints that may occur during ACPI sleep or wake events.

| <i>Checkpoint</i> | <i>Description</i> |
|--------------------------|----------------------------------------------------------------------|
| AC | First ASL check point. Indicates the system is running in ACPI mode. |
| AA | System is running in APIC mode. |
| 01, 02, 03, 04, 05 | Entering sleep state S1, S2, S3, S4, or S5. |
| 10, 20, 30, 40, 50 | Waking from sleep state S1, S2, S3, S4, or S5. |

Note: Checkpoints may differ between different platforms based on system configuration. Checkpoints may change due to vendor requirements, system chipset or option ROMs from add-in PCI devices.