




**Connect Tech Inc.**  
*Industrial Strength Communications*

---

# FlashDrive/104

## User's Manual

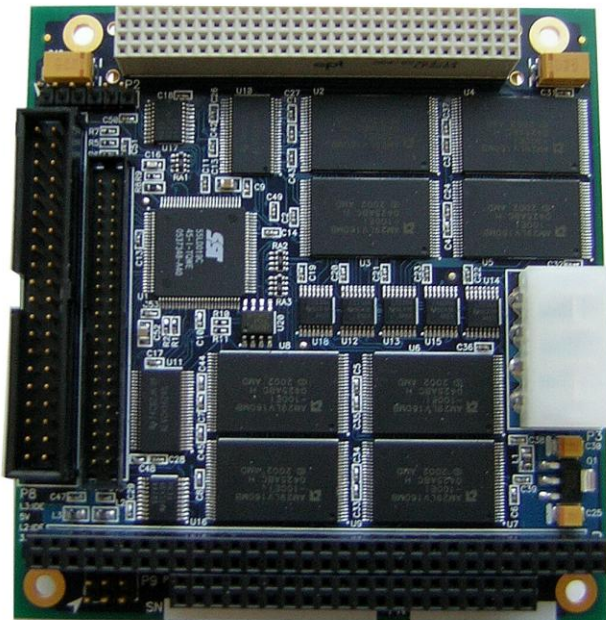

**Connect Tech, Inc.**

42 Arrow Road

Guelph, Ontario

Canada, N1K 1S6

**Tel:** 519-836-1291

800-426-8979

**Fax:** 519-836-4878

**Email:** sales@connecttech.com

support@connecttech.com

**URL:** <http://www.connecttech.com>

**CTIM-00041 Revision 0.08 May 12, 2010**

## Table of Contents

Limited Lifetime Warranty.....	ii
Copyright Notice .....	ii
Trademark Acknowledgment .....	ii
Customer Support Overview .....	iii
Contact Information.....	iii
Introduction .....	1
Features.....	1
Hardware Description, Installation and Configuration .....	1
Board Overview.....	2
Setting the Master/Slave Jumper.....	3
Master/Slave Selection .....	3
Write Protection .....	3
Installing the FlashDrive/104.....	4
Installing an Operating System.....	4
Specifications .....	5

## List of Tables

Table 1: FlashDrive/104 Components.....	2
---	---

## List of Figures

Figure 1: FlashDrive/104 Layout .....	2
---------------------------------------	---

## Limited Lifetime Warranty

Connect Tech Inc. provides a Lifetime Warranty for all Connect Tech Inc. products. Should this product, in Connect Tech Inc.'s opinion, fail to be in good working order during the warranty period, Connect Tech Inc. will, at its option, repair or replace this product at no charge, provided that the product has not been subjected to abuse, misuse, accident, disaster or non Connect Tech Inc. authorized modification or repair.

You may obtain warranty service by delivering this product to an authorized Connect Tech Inc. business partner or to Connect Tech Inc. along with proof of purchase. Product returned to Connect Tech Inc. must be pre-authorized by Connect Tech Inc. with an RMA (Return Material Authorization) number marked on the outside of the package and sent prepaid, insured and packaged for safe shipment. Connect Tech Inc. will return this product by prepaid ground shipment service.

The Connect Tech Inc. Lifetime Warranty is defined as the serviceable life of the product. This is defined as the period during which all components are available. Should the product prove to be irreparable, Connect Tech Inc. reserves the right to substitute an equivalent product if available or to retract Lifetime Warranty if no replacement is available.

The above warranty is the only warranty authorized by Connect Tech Inc. Under no circumstances will Connect Tech Inc. be liable in any way for any damages, including any lost profits, lost savings or other incidental or consequential damages arising out of the use of, or inability to use such product.

## Copyright Notice

The information contained in this document is subject to change without notice. Connect Tech Inc. shall not be liable for errors contained herein or for incidental consequential damages in connection with the furnishing, performance, or use of this material. This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Connect Tech, Inc.

Copyright © 2008 by Connect Tech, Inc.

## Trademark Acknowledgment

Connect Tech, Inc. acknowledges all trademarks, registered trademarks and/or copyrights referred to in this document as the property of their respective owners.

Not listing all possible trademarks or copyright acknowledgments does not constitute a lack of acknowledgment to the rightful owners of the trademarks and copyrights mentioned in this document.

## Customer Support Overview

If you experience difficulties after reading the manual and/or using the product, contact the Connect Tech reseller from which you purchased the product. In most cases the reseller can help you with product installation and difficulties.

In the event that the reseller is unable to resolve your problem, our highly qualified support staff can assist you. Our support section is available 24 hours a day, seven days a week on our website at:

[www.connecttech.com/sub/support/support.asp](http://www.connecttech.com/sub/support/support.asp). See the contact information section below for more information on how to contact us directly. Our technical support is always free.

Not listing all possible trademarks or copyright acknowledgments does not constitute a lack of acknowledgment to the rightful owners of the trademarks and copyrights mentioned in this document.

## Contact Information

We offer three ways for you to contact us:

### Telephone/Facsimile

Technical Support representatives are ready to answer your call Monday through Friday, from 8:30 a.m. to 5:00 p.m. Eastern Standard Time. Our numbers for calls are:

Telephone: 800-426-8979 (North America only)

Telephone: 519-836-1291 (Live assistance available 8:30 a.m. to 5:00 p.m. EST, Monday to Friday)

Facsimile: 519-836-4878 (on-line 24 hours)

### Email/Internet

You may contact us through the Internet. Our email and URL addresses are:

[sales@connecttech.com](mailto:sales@connecttech.com)

[support@connecttech.com](mailto:support@connecttech.com)

[www.connecttech.com](http://www.connecttech.com)

### Mail/Courier

You may contact us by letter and our mailing address for correspondence is:

Connect Tech, Inc.

42 Arrow Road

Guelph, Ontario

Canada N1K 1S6

## Introduction

Connect Tech's FlashDrive/104 is a flash based, solid state storage module designed using the latest NAND technology. It may be used as stand alone or in PC/104 or PC/104-*Plus* stacks. Designed as a robust, drop-in replacement for magnetic hard drives that can be prone to mechanical failures, FlashDrive/104 is immune to corruption caused by dirt, shock, vibration and extreme temperatures.

## Features

- Platform:
  - PC/104 form factor for any platform
  - Suitable for any operating system with built-in ATA/IDE support
- Hard Disk Interface:
  - Industry standard ATA/IDE interface
  - Read/write performance up to 10 MB per second
  - Supports up to Mode-4 PIO (programmed input/output)
  - Supports up to Mode-2 multi-word DMA
  - Standard master/slave selection
  - Electrical interface
    - **DDG / DEG: 5V Tolerant signaling**
    - **DGG: 3.3V CMOS signaling, No 5V tolerance**
- Flash Storage:
  - NAND Flash – 4, 8, 16 or 32GB models
  - Global write protection for prevention of inadvertent erase or write commands
  - On-board flash controller featuring:
    - Embedded Flash file system
    - Wear leveling algorithms to increase the longevity of Flash
    - Bad block management and error code correction
- Supports all operating systems – no drivers required
- Resistant to dirt, shock, vibration and extreme temperatures
- Commercial temperature range of 0°C to 70°C (DDG only)
- Industrial temperature range of -40°C to 85°C

## Hardware Description, Installation and Configuration

**WARNING:** For DGG models, ensure that your ATA/IDE interface does not operate at 5V signaling levels. The DGG can handle a maximum of 3.3V and is not 5V tolerant. 3.3V CMOS is the signaling level supported by most modern mother boards and chipsets. Review your motherboard documentation before installing.

The following sections describe the configuration jumpers and connectors for FlashDrive/104. Before installing the FlashDrive/104 hardware perform the following steps:

1. Turn off your computer.
2. Make sure that you are properly grounded.
3. Set the master/slave jumper (J1). [See section 1.](#)
4. Connect the IDE cable, power cable (if required) and mount drive. [See section 2.](#)
6. Install the operating system. [See section 3.](#)

## Board Overview

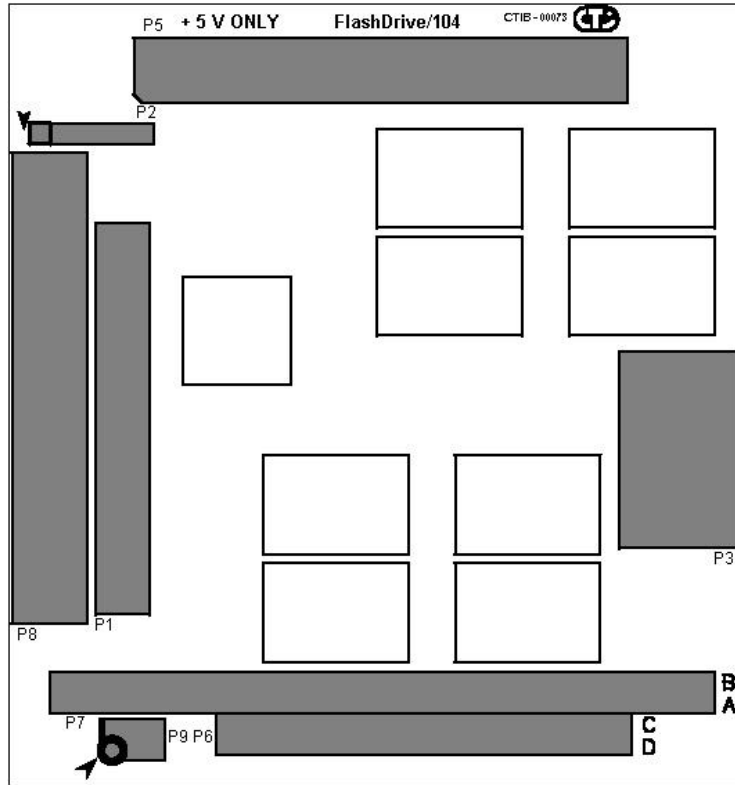


Figure 1: FlashDrive/104 Layout

Table 1: FlashDrive/104 Components

Location	Description/Function	
P9	Master / Slave Selection and Write Protect	
P8	ATA/IDE 0.100" Connector	
P1	ATA/IDE 2mm Connector DDG/ DEG: pins 41 & 42 are connected to 5V DGG: pins 41 & 42 are not connected	
P2	Diagnostic Header (Connect Tech use only)	
P6, P7	PC/104 Connector – specifications available from the <a href="#">PC/104 Consortium</a>	
P5	PCI-104 Connector -specifications available from the <a href="#">PC/104 Consortium</a>	
P3	Power Connector:	
	Pin	Signal
	1	N/C (+12 V on cable)
	2	N/C (GND on cable)
	3	GND
	4	+5V

NOTE: P5, P6 and P7 are used with mechanical stack throughs only. P3 provides power over standard PC disk drive power connectors (5V only)


## Setting the Master/Slave Jumper

J1 provides two independent functions:

- 1) Standard hard drive master/slave selection
- 2) Global write protect, for read only access

### Jumper Block Diagram (P9)

Read/Write (Pins 4 and 6)  
No Connect (Pin 2)




Master/Slave (Pins 1, 3, 5)




### Master/Slave Selection


No jumpers on pins 1, 3 and 5  
indicate that drive is a slave



Jumpers installed on pins 3 and 5  
indicate that drive is a master




Jumpers installed on pins 1 and 3  
indicate that selection is controlled  
by a CSEL (cable select) signal




### Write Protection

No jumpers on pins 4 and 6 indicates  
Flash read/write access



Jumpers installed on pins 4 and 6  
indicate that Flash is read only



## Installing the FlashDrive/104

**Warning!** Connecting both the 44-pin connector and 40-pin connector at the same time will lead to mis-identification by the computer's BIOS and operating system. Ensure that only one IDE cable is connected at a time.

### Installing into a PC/104 stack with a 40-pin connector:

- 1) Connect the FlashDrive/104 to the main board, using the 40-pin connector (P8, 0.100").
- 2) Insert the FlashDrive/104 into the PC/104 stack.

**Warning!** Power is provided through the PC/104 and PCI-104 connectors. Do not supply power through the external power connector (P3).

### Installing into a PC/104 stack with a 44-pin connector:

- 1) Connect the FlashDrive/104 to the main board, using the 44-pin connector (P1, 2mm).
- 2) Insert the FlashDrive/104 into the PC/104 stack.

Note: For DDG/DEG power can be provided through pins 41 & 42 of the 44-pin connector (P1), however, the voltage must be 5V.

**Warning!** Power is provided through the PC/104 and PCI-104 connectors. Do not supply power through the external power connector (P3).

### Installing into other systems using a 40-pin connector:

- 1) Mount the FlashDrive/104 as required.
- 2) Connect the FlashDrive/104 to the main board, using the 40-pin connector (P8, 0.100").
- 3) Connect the standard disk drive power cable to the external power connector (P3).

### Installing into other systems using a 44-pin connector:

- 1) Mount the FlashDrive/104 as required.
- 2) Connect the FlashDrive/104 to the main board, using the 44-pin connector (P1, 0.100").
- 3) Power Connection

**DDG / DEG:** Power can be provided through pins 41 & 42 of the 44-pin connector (P1), however, the voltage must be 5V.

**DGG:** Connect the standard disk drive power cable to the external power connector (P3)

## Installing an Operating System

FlashDrive/104 is provided without formatted partitions. It may be formatted as the primary bootable disk drive or as a secondary disk drive, similar to any other hard disk drive. Any standard disk partitioning and formatting utility may be used.

All operating systems that are compatible with ATA/IDE devices will recognize the FlashDrive/104 and may be installed into boot partitions. Because installation methods may vary between specific operating systems, it may be necessary to consult your operating system or the main board's ATA/IDE controller documentation for instructions.

## Specifications

<b>Available Capacities</b>	DDG001 / DEG001 / DGG001	4GB
	DDG002 / DEG002 / DGG003	8GB
	DDG003 / DEG003 / DGG003	16GB
	DDG004 / DEG004 / DGG004	32GB
<b>Host Interface</b>	ATA/IDE Supports up to PIO Mode-4 Supports up to Multi-word DMA Mode-2 ATA Electrical interface <b>DDG / DEG:</b> 5V tolerant signaling <b>DGG:</b> 3.3V CMOS signaling only	
<b>Data Transfer Rate</b>	Read/write up to 10MB per second	
<b>Data Retention</b>	10 years	
<b>Endurance</b>	Dynamic wear leveling with built-in ECC	
<b>Operating System Support</b>	All operating systems – no drivers required	
<b>Operating Environment</b>	Operating Temperature, Commercial version	0°C to 70°C (32°F to 158°F)
	Operating Temperature, Industrial version	-40°C to 85°C (-40°F to 185°F)
	Humidity	95% non-condensing
<b>Power Requirements</b>	Input voltage	+5V DC +/-5%
	Current, idle	5 mA (max)
	Current, continuous reads or writes	150 mA (max) 100 mA (avg)
<b>MTBF</b>	3,369,749 hours (DDG001, 4GB model, others will be similar)	
<b>Dimensions</b>	PC/104 compliant	
	Length	9.5885cm/3.775"
	Width	9.017cm/3.55"
<b>Weight</b>	0.090 kg	